


INSTALLER'S REFERENCE

XTANT 2140C

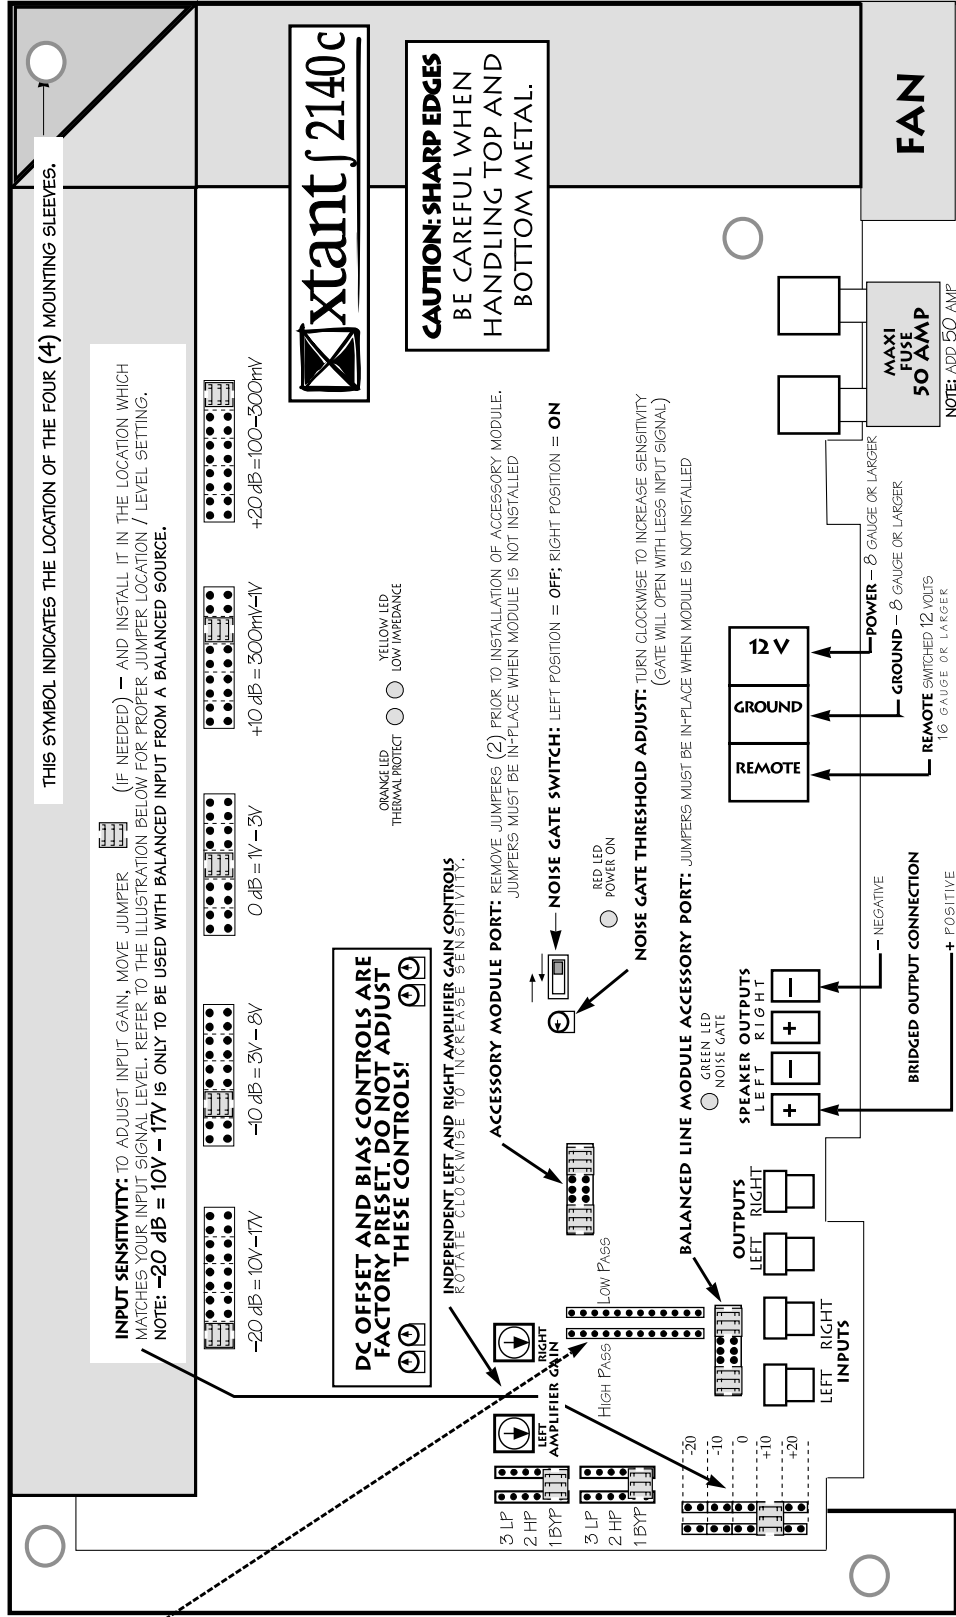

CROSSOVER FREQUENCY SELECTION:
 TO CHANGE THE FREQUENCY OF EITHER THE HIGH AND/OR LOW PASS FILTERS, REMOVE AND REPLACE THE FREQUENCY MODULE (SIP) LOCATED ON THE CIRCUIT BOARD NEXT TO THE CROSSOVER MODE JUMPERS. NOTE THAT THE IDENTITY OF THE HIGH & LOW PASS SOCKETS ARE MARKED ON THE BOARD, REFER TO THIS DRAWING FOR LOCATION & THE CHART ON THE BACK FOR THE AVAILABLE SELECTION OF SIP / FREQUENCY VALUES.

CROSSOVER MODE JUMPERS:
 3 - Low Pass
 2 - High Pass
 1 - BYPASS

AMPLIFIER:
 3 - Low Pass
 2 - High Pass
 1 - BYPASS