

# xtant



# xtant

7676 South 46th Street • Phoenix, AZ 85040  
888.449.8268 • Xtant.com

## Owner's Manual – RLC Remote Level Connector

# NDM152

## INSTALLING THE RLC

### STEP 1: Installing on Amplifier

The RLC is designed to be adjusted with the use of a control knob.

1. Remove the RLC from the package.
2. Turn-off amplifier.
3. Plug the supplied cord into the RLC's socket on the amplifier.
4. Rotate the amplifier's gain control clockwise to the loudest desired listening level.
5. Run the supplied cord to the location in the vehicle where you want to mount the gain knob.

## INSTALLING THE RLC

### STEP 2: Rear & Surface Mount

#### FOR REAR MOUNT

1. Gently pull the black gain knob off the shaft to remove it.
2. Plug the cord into the RLC control box.
3. Use a 3/8" size drill bit to make a hole in the surface you wish to mount the knob to.
4. Place the control box behind the panel and insert the knob through the hole.
5. Replace the nut, located in the parts bag, on the shaft by turning it clockwise, and then gently push the knob back onto the shaft.
6. The RLC knob is now controlling the gain of your amplifier.

#### FOR SURFACE MOUNT

1. Plug supplied cord into RLC control box.
2. Secure control box to surface where you wish to mount it, with supplied screws.
3. The RLC knob is now controlling the gain of your amplifier.